

## Pointing Stick

A pointing stick or track point is a pressure-sensitive pointing device. It looks like a pencil eraser. It exists between keys of keyboard. It is used to control the movement of a pointer on the screen. The pointer in the screen moves in the direction in which the pointing stick is pushed. Pointing stick input device is normally used with laptop computers.

